

## UU-A7RIII UW Housing Instruction Manual

EN

Umi Umi Inc.  
MTK Bld. 6F, 2-9-1 Higashi Ueno, Taito-ku, Tokyo 110-0015, Japan

Thank you for choosing Umi Umi UU-A7RIII UW housing.  
Please read this instruction carefully before use for your  
understandings of a proper handling.

We assume no responsibility whatever for any damage  
on housing, camera or accessories resulting from  
user's negligence.

We assume no responsibility for incidental damages  
arising out of product defects, such as shooting expenses,  
any relevant expenses or opportunity loss etc.

## After Service

### Warranty

The warranty card has been attached. Make sure everything is correctly  
stated such as the date of purchase or shop's name. Read warranty terms  
and conditions carefully and keep it in safe custody.

### Repair

The warranty covers repair service in accordance with warranty terms  
and conditions. To obtain warranty service, you may contact the nearest  
authorized dealers.

※Attention: At the request of customer we assume paid repair  
service when the product is repairable. You may obtain service at  
your dealer or the nearest authorized dealers.

### Contact

Contact your dealer or the nearest authorized dealers when you have any  
questions about after service.

## ⚠ Precautions For Safe Handling

### Please observe the following precautions.

- Opening lock knob with a long nail or an artificial nail may cause a  
chipping or breaking nail.
- Do not set up housing in a dusty or sandy environment.
- Handle housing carefully to prevent any strong impacts by dropping  
or crashing.
- Do not leave or keep housing in a place being exposed to direct  
sunlight or high temperature like on the sand, on the deck of a boat or  
in the trunk of a car, etc.
- After rinsing housing in fresh water to remove salts, dry with a towel,  
do not use any kinds of heating equipment.
- Do not use the petroleum solvents such as alcohol, benzin and  
thinner, or oil/chemicals allied products such as corrosion prevention,  
lubricant and glazing agents.
- Do not leave or keep housing at any place in high humidity or extreme  
fluctuations in temperature.
- Keep the housing out of children's reach.

## ⚠ Maintenance/ Storage

- Rinse the housing thoroughly in fresh water after use and keep in  
a cool and dry place, away from direct sunlight.
- Do not keep housing in a place with extreme fluctuations in  
temperature, extreme cold, or high humidity.
- We recommend a complete overhaul of housing per year.



## Accessories Included

Please make sure all of the following items are included in  
this package.



- ① Spare o-ring
- ② O-ring remover
- ③ Silicone grease
- ④ Camera Tray

## Switches And Controls

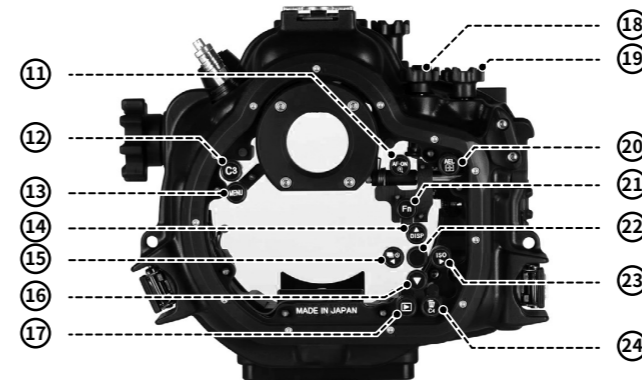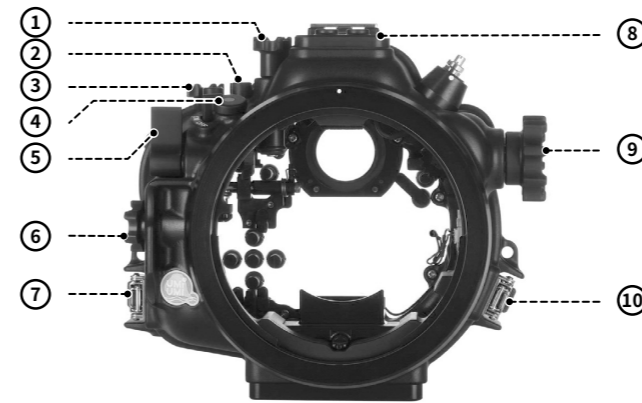

- ① Mode dial
- ② C2 button
- ③ C1 button
- ④ ON/OFF button
- ⑤ Shutter lever
- ⑥ Front dial
- ⑦ Right lock knob
- ⑧ Fiber optic cable socket
- ⑨ Focus/ Zoom dial
- ⑩ Left lock knob
- ⑪ AF-ON button
- ⑫ C3 button
- ⑬ MENU button
- ⑭ DISP/ ▲ button
- ⑮ Drive mode/ ◀ button
- ⑯ ▼ button
- ⑰ Playback button
- ⑱ Rear dial
- ⑲ Exposure compensation  
button
- ⑳ AEL button
- ㉑ Fn button
- ㉒ Set button
- ㉓ ISO/ ► button
- ㉔ C4/ Delete button

※Attention: When using the UU-A7RIII housing, the following  
functions of the camera can not be used.

- Control wheel
- Multi selector

## Specifications

Compatible Camera:	Sony α7R III/ α7 III
Material:	ABS resin
Dimensions:	(W) 207mm × (H) 185mm × (D)130mm
Weight:	Approx 1,520g (Housing Only)
Depth Rating:	60m (197ft)

## A. Camera Settings (IMPORTANT)

1. Remove the eyepiece cup and  
hot shoe cap from camera  
body. All the accessories need  
to be removed; such as strap,  
etc.




2. Press the **MENU** button.

Select **2** tab.

Then, enter into  
**FINDER/MONITOR** menu.



3. Select **Monitor(Manual)** in  
the **FINDER/MONITOR** menu.

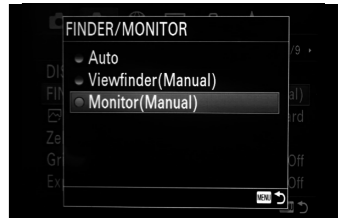

## B. Manual Display Switch Settings

※After finish the setting at  
section A, you could not use  
the viewfinder. However, you  
can assign the custom key for  
switch between viewfinder and  
LCD screen manually. Here we  
will assign C4 button.



1. Press the **MENU** button.

Select **2** tab.

Then, enter into  
**Custom Key**



2. Select **Custom Button 4**.  
Then, change the option to  
**Finder/Monitor Sel..**

The setting is completed.  
You can switch the display  
between finder and monitor  
by using C4 button.



## C. Place The Camera

1. Attach the camera tray to the camera's tripod hole.



2. Slightly turn up the screen. The protruding part is facing the front of the camera, please be careful of the wrong direction.




3. Look from the side elevation.



4. Open the left and right latches.



5. To open the latch, you can simply push the latch button at ❶, then pull the latch lever at ❷.

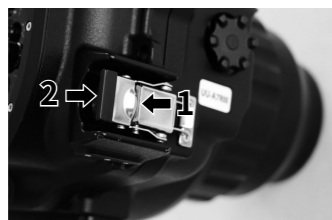

6. Remove the top hook and open the back casing of the housing.



7. Put it in a clean place without dust, hair, etc.



8. Clean the flat part of the outside of the O-ring groove (about 5mm).



9. Apply proper amount of silicone grease to your fingers, and then apply evenly to the O-ring.



10. Put the O-ring into the housing.



11. Make sure that the O-ring is properly placed in the housing and there are nothing like no dust, hair, etc.



12. Pull the **Mode Dial** up.



13. Make sure the power switch is at OFF position.




14. Hold the camera as the picture shows and place it vertically into the housing.  
※You must install the port on the housing first before place the camera inside. (Please see section E)



15. Make sure the **Focus/Zoom Dial** work properly when the lens gear is installed on the lens.



16. Push the **Mode Dial** back.

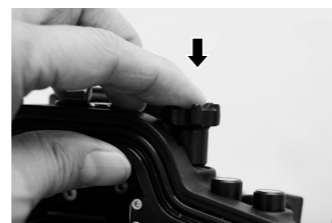

17. Hook on top of the housing.



18. Close the left and right locks.  
※Please ensure that the latches are locked.



19. Please check each dial, the power supply and lever for normal operation.



## D. After-diving Maintenance

1. Wash the seawater with clean water, and dry it with a towel.



2. Carefully unlock the housing. When opening the case, water droplets may accumulate in the vicinity of the O-ring's groove.



3. Wipe it with a paper towel or cotton swab.



4. Wipe the water droplets near the groove on the back casing..



## E. Port Installation

UU-A7RIII UW housing is using bayonet mount port. When the camera is installed in the housing, the port is locked by the camera tray for prevent the port remove and rotate by accident.

Please ensure the camera tray is remove from the housing before install the port.

1. Align ○ mark on the housing and the port, and press the port straight down.



2. Turn the port clockwise until the ○ mark is aligned to the ○ mark on the housing.



3. Done.



## F. Optional

- Flash Trigger



- 2-pin Sync Connector



- Leak Sensor



- Vacuum Connector

