



UU-A7RIV UW Housing for SONY α7R IV Instruction Manual



Thank you for choosing UU-A7RIV housing. Please read this instruction manual carefully before use for your understandings of a proper handling.

We assume no responsibility whatever for any damage on housing, camera or accessories resulting from user's negligence. We assume no responsibility for incidental damages arising out of product defects, such as shooting expenses, any relevant expenses or opportunity loss etc.

After Service

Warranty

The warranty card has been included in the product. Make sure everything is correctly stated such as the date of purchase or shop's name. Read warranty terms and conditions carefully and keep it in safe custody.

Repair

The warranty covers repair service in accordance with warranty terms and conditions. To obtain warranty service, you may contact the nearest authorized dealers.
*Attention: At the request of customer we assume paid repair service when the product is repairable. You may obtain service at your dealer or the nearest authorized dealers.

Contact

Contact your dealer or the nearest authorized dealers when you have any questions about after service.

Manufacture

Umi Umi Inc.
2-9-1, MTK Bldg 6F Higashi Ueno, Taito-Ku, Tokyo 110-0015
Japan
TEL: +81-(0)3-6284-2383
E-mail : info@umiumi.jp
Web page: <http://www.umiumi.jp>

Precautions for Safe Handling

- Opening lock knob with a long nail or anartificial nail may cause a chipping or breaking nail.
- Do not set up housing in a dusty or sandy environment.
- Handle housing carefully to prevent any strong impacts by dropping or crashing.
- Do not leave or keep housing in a place being exposed to direct sunlight or high temperature like on the sand, on the deck of a boat or in the trunk of a car, etc.
- After rinsing housing in fresh water to remove salts, dry with a towel, do not use any kinds of heating equipment.
- Do not use the petroleum solvents such as alcohol, benzin and thinner, or oil/chemicals allied products such as corrosion prevention, lubricant and glazing agents.
- Do not leave or keep housing at any place in high humidity or extreme fluctuations in temperature.
- Keep the housing out of children's reach.

Maintenance/Storage

- Rinse the housing thoroughly in fresh water after use and keep in a cool and dry place, away from direct sunlight.
- Do not keep housing in a place with extreme fluctuations in temperature, extreme cold, or high humidity.
- We recommend a complete overhaul of housing per year.

Important

UU-A7RIV Housing can not control some of the feature from the housing.

- ① Control wheel
- ② Multi selector

Accessories Included

Please make sure all of the following items are included in this package



 
 
- ① Spare O-ring
- ② Camera tray
- ③ O-ring remover
- ④ Silicone grease

Basic Colors

- White
 - Black
- * Different colors are available by order.

Specifications

- Compatible camera: Sony a7RIV
- Material: ABS resin
- Dimensions: (W)308.5x(H)131x(D)193mm Weight: Approx. 2,000g (Housing only)
- Depth rate: 60m (197ft)

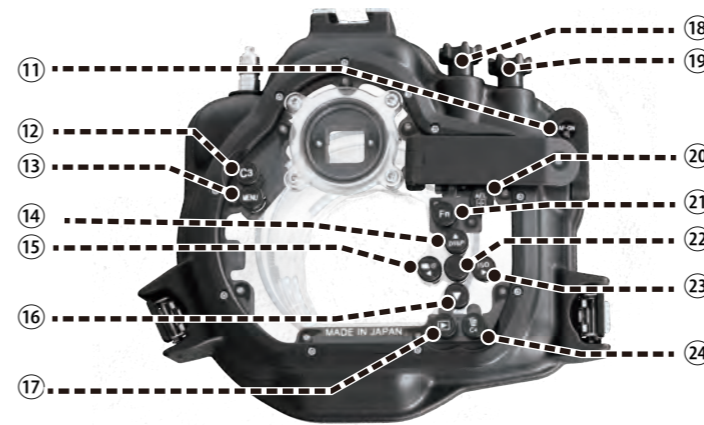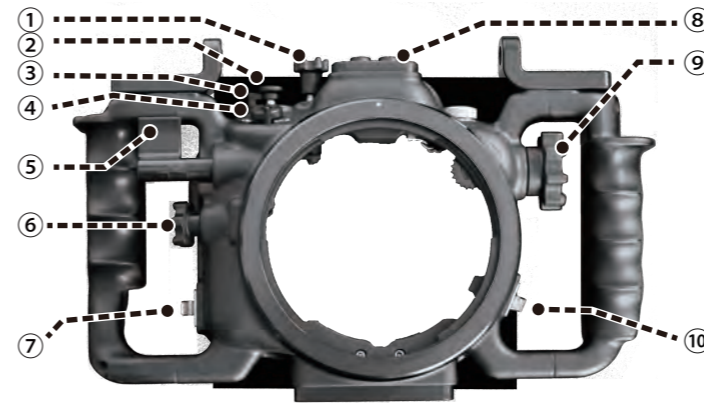

- ① Mode dial
- ② C2 button
- ③ C1 button
- ④ ON / OFF switch
- ⑤ Shutter lever
- ⑥ Front dial
- ⑦ Locking latch right
- ⑧ Fiber optic cable socket
- ⑨ Focus/Zoom dial
- ⑩ Locking latch left
- ⑪ AF-ON button
- ⑫ C3 button
- ⑬ Menu button
- ⑭ DISP/ up button
- ⑮ Drive mode / left button
- ⑯ Down button
- ⑰ Play button
- ⑱ Rear dial
- ⑲ Exposure compensation dial
- ⑳ AEL button
- ㉑ Fn button
- ㉒ Set button
- ㉓ ISO / right button
- ㉔ C4 / delete button

Camera setting (Please proceed before use)

Remove eye piece cup and hot shoe cap from camera body. All the accessories needs to be removed such as strap.



Press the MENU button.

Select **2** by using left or right button.

Select FINDER/MONITOR

Select Monitor (Manual).



Manual Display Switch Setting

From above setting, you can not use viewfinder. But if you would like to see viewfinder or LCD screen, you can assign the switch on custom key button. Please follow the steps below.



(Assign C4)

Press the MENU button.
Select **2** by using left or right button.
Select custom key.
(Assign the custom button 4 this time.)



Select custom button 4.
Select FINDER/MONITOR CHANGE

The setting is completed. When you press C4 button, you are able to switch Finder or Monitor on your camera.



How to set camera

Place the camera tray bottom of the camera and tighten by camera fixing screw.



Make sure the camera tray is placed correct position. The protrusion of the camera tray always goes to front side of the camera.



This is how you see the camera from a side.



Open the locking latch on both left and right.



To open the locking latch, press and hold the lock of the both locking latch.



Open the rear case and remove the hook on top of the housing.



Put the cases on the clean area.



Clean the flat surface (about 5mm width) where the O-ring attaches on the rear case.



Apply proper amount of silicone grease to your fingers, and then apply it evenly to the O-ring.



 
Install the O-ring in to the housing.



Make sure that the O-ring is properly installed in the housing with no dust or hair left.



Pull the mode dial and C1/C2 button up.

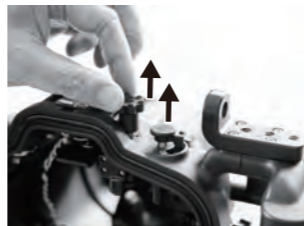

Make sure the power switch is OFF position.



Set the camera in the housing straight forward.



Make sure the housing dial for the gear moves properly when the lens gear is installed on the lens.



Push the mode dial and C1/C2 button down.



Hook on top of the housing.



Close the locking latch both left and right.
* Please make sure the locking latches are locked.



Make sure ON/OFF switch and all the control works properly.



How to install port

● It is a bayonet type of port. When the camera is installed in the housing, the camera tray locks the port and prevents to rotate port by accident.

* Please make sure the camera tray is removed from housing when you install the port. When the camera tray is installed in the housing, you can not install or remove the port because of the port lock.



Align ● on the housing and the port.



Press the port straight down.



Turn the port clockwise. Align ● on the housing and ■ on the port.



Maintenance after diving

Rinse the product with fresh water and remove all the salt water. Dry it well with a soft dry towel.



Carefully unlock the locking latches and open the housing. Water may remain in the O-ring groove.



Please wipe the water by a cotton swab or a tissue.



Also please wipe the water on the rear case.

