



## UU-M5 UW Housing Instruction Manual

EN

Umi Umi Inc.  
MTK Bld 6F, 2-9-1 Higashi Ueno, Taito-ku, Tokyo 110-0015, Japan

Thank you for choosing Umi Umi UU-M5 UW housing.  
Please read this instruction carefully before use for your  
understanding of a proper handling.

We assume no responsibility for any damage on  
housing, camera or accessories resulting from user's  
negligence.

We assume no responsibility for any incidental damage  
arising out of product defects, such as shooting expenses,  
any relevant expenses or opportunity loss, etc.

## After Sales Service

### Warranty

The warranty card has been attached. Make sure everything is correctly  
stated such as the date of purchase or shop's name. Read warranty terms  
and conditions carefully and keep it in safe custody.

### Repair

The warranty covers repair service in accordance with warranty terms  
and conditions. To obtain warranty service, you may contact the nearest  
authorized dealers.

※Attention: At the request of customer, we assume paid repair  
service when the product is repairable. You may obtain service at  
your dealer or the nearest authorized dealers.

### Contact

Contact your dealer or the nearest authorized dealers when you have any  
questions about after sales service.

## ⚠ Precautions For Safe Handling

### Please observe the following precautions.


- Opening lock knob with a long nail or an artificial nail may cause a  
nail injury.
- Do not set up housing in a dusty or sandy environment.
- Handle housing carefully to prevent any strong impacts by dropping  
or crashing.
- Do not leave or keep housing in a place being exposed to direct  
sunlight or high temperature like on the sand, on the deck of a boat or  
in the trunk of a car, etc.
- After rinsing housing in fresh water to remove salts, dry with a towel,  
do not use any kinds of heating equipment.
- Do not use the petroleum solvents such as alcohol, benzin and  
thinner, or oil/chemicals allied products such as corrosion prevention,  
lubricant and glazing agents.
- Do not leave or keep housing at any place in high humidity or extreme  
fluctuations in temperature.
- Keep the housing out of children's reach.

## ⚠ Maintenance/ Storage

- Rinse the housing thoroughly in fresh water after use and keep in  
a cool and dry place, away from direct sunlight.
- Do not keep the housing in a place with extreme fluctuations in  
temperature, extreme cold, or high humidity.
- We recommend a complete overhaul of housing per year.



## Accessories Included

Please make sure all of the following items are included in  
this package.

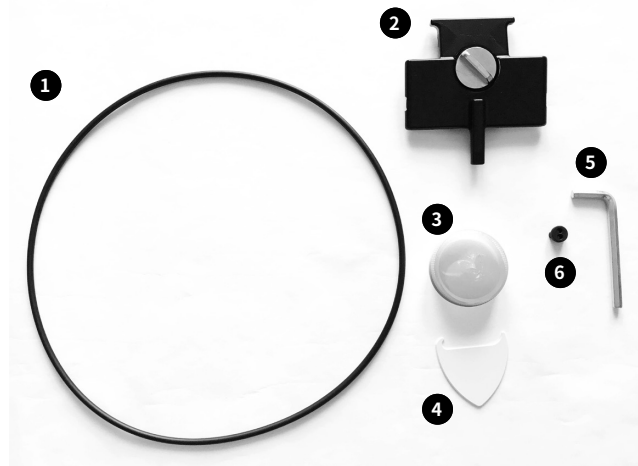

1. Spare o-ring
2. Camera mount
3. Silicone grease
4. O-ring remover
5. Hex wrench
6. Rubber cap

## Switches And Controls

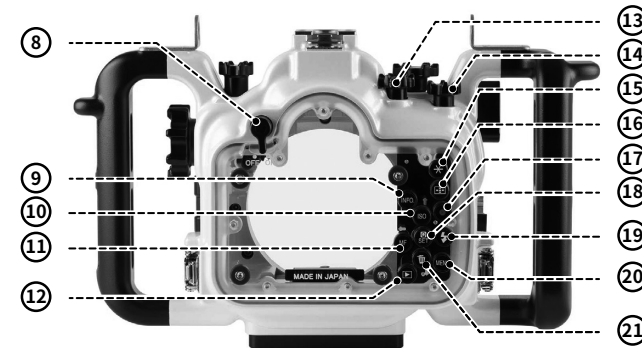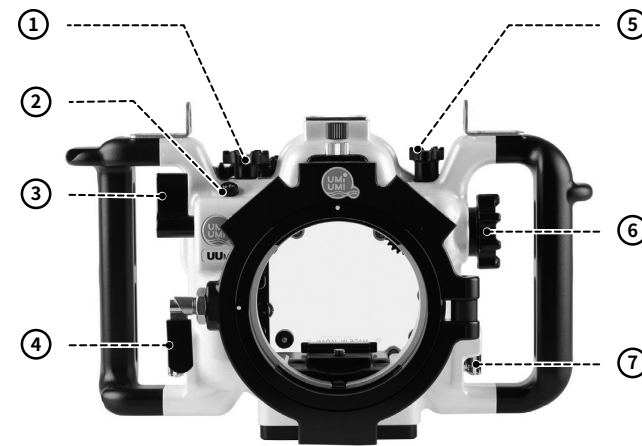

1. Main dial
2. Multi-function button
3. Shutter lever
4. Ring arm system lock
5. Mode dial
6. Zoom dial
7. Left Lock knob
8. ON/OFF switch
9. INFO button
10. ISO/▲ button
11. Manual focus/◀ button
12. Playback button
13. Quick control dial
14. Exposure compensation dial
15. AE lock button
16. AF frame selection button
17. Movie button
18. Quick setting menu/ Set button
19. Flash/▶ button
20. MENU button
21. Erase/▼ button

## Specifications

Compatible Camera:	Canon EOS M5
Material:	ABS resin
Dimensions:	(W) 287mm × (H) 176mm × (D) 111mm
Weight:	Approx 1.56kg
Depth Rating:	60m (197ft)

## A. Camera Settings (IMPORTANT)

When you watch the viewfinder closely, the information  
on Canon EOS M5 will be automatically transferred to the  
viewfinder. When you put the camera into the housing, it  
will be automatically transferred to the viewfinder. Before  
use, you need to change the settings to the screen. Please  
follow the steps below.




1. Press the **MENU** button.

Select the **🔑** tab.

Move the cursor to **Display  
Settings**, then press SET  
button.

2. Switch the **Display Control**  
to **Manual**.

3. Switch the **Manual Display** to  
**Screen**.

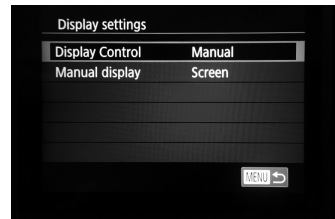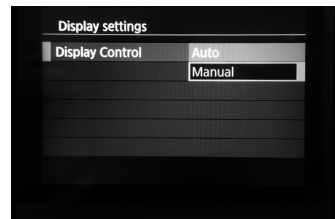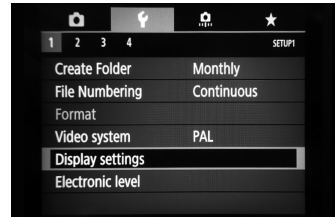

## B. Manual Display Switch Settings



1. If It is not possible to switch  
the Manual Display setting to  
the screen. When using both  
screen and viewfinder, you  
can set the function of M-Fn  
button. Please follow the  
steps below.

2. Press the **MENU** button.


Select the **🔑** tab.

3. Move the cursor to  
**C.Fn II: Others**, then press  
SET button.


4. On page 2 of C.Fn II: Other  
Custom Controls, press SET  
button.

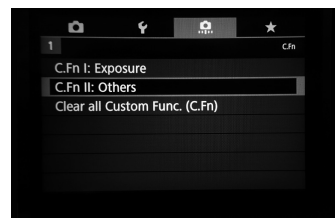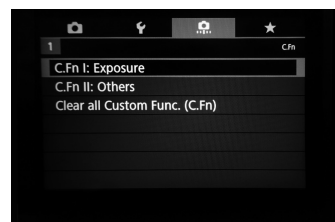


5. Select the third option under Other buttons, and press SET button.

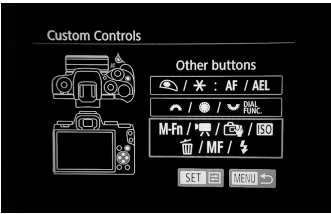


6. Select the M-Fn option under M-Fn button, and press SET button.

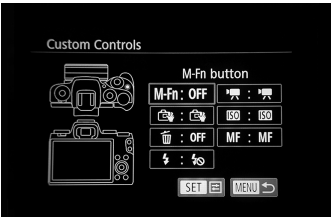

7. Select the IOI, and press SET button.

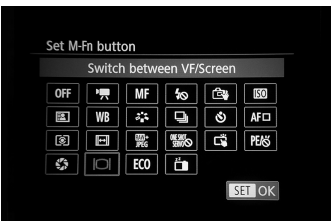

8. M-Fn button is now set as the IOI option, you can switch the display between screen and viewfinder by pressing M-Fn button.

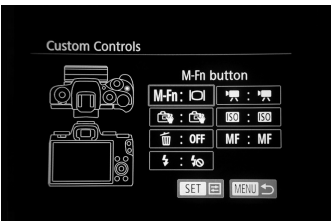

5. Open the left and right latches. You have to control the lock from the outside of the handle by fingers.



6. **※Please be careful not to pinch your fingers in the handle.**



7. Remove the top hook and the back cover of the outer casing.




8. Put it in a clean place without dust, hair, etc.



13. Put the O-ring back into the housing.



14. Make sure that the O-ring is properly placed in the housing and there are nothing like no dust, hair, etc.

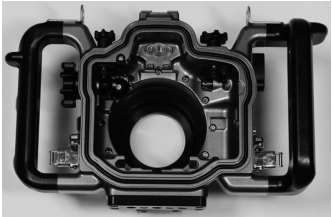

15. Open the camera built-in flash. **※Cameras without built-in flash open cannot be placed into the camera housing**



16. Hold the camera as the picture shows and place it vertically into the housing.



20. Close the left and right locks. **※Please be careful not to pinch your fingers.**



21. Please check each dial, the power supply and lever for normal operation



## C. Place The Camera


1. Attach the camera mount to the camera's tripod hole.



2. Slightly turn up the screen.




3. The protruding part is facing the front of the camera, please be careful of the wrong direction.

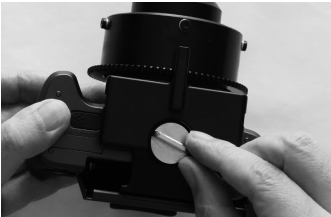


4. Look from the side elevation.



9. Use the included O-ring remover to remove the O-ring and place the O-ring in a clean and dust-free place.

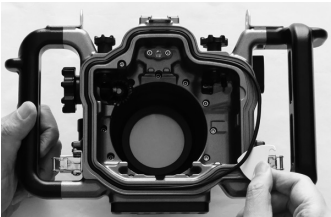

10. Use a cotton swab to clean the groove in which the rubber ring is placed.

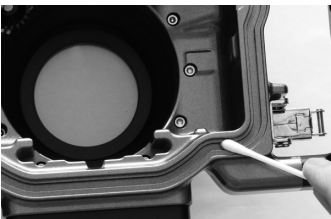

11. Clean the flat part of the outside of the O-ring groove (about 5mm).



12. Apply proper amount of silicone grease to your fingers, and then apply evenly to the O-ring.



17. When the gear is mounted on the lens, gently turn the focus knob to engage the gear. **※Please ensure that the gear does not leave the lens.**



18. Meanwhile, please adjust the camera mount to the same height as the edge of the camera housing.



19. Hook on top.



## D. After-diving Maintenance

1. Wash the seawater with clean water, and dry it with a towel.



2. Carefully unlock the housing. When opening the case, water droplets may accumulate in the vicinity of the O-ring's groove.



3. Wipe it with a paper towel or cotton swab.



4. Wipe the water droplets near the groove on the back cover.

