

# **UMIUMI.JP**

# **UU-TG6 UW Housing Instruction Manual**

ΕN

### Umi Umi Inc.

MTK Bld. 6F, 2-9-1 Higashi Ueno, Taito-ku, Tokyo 110-0015, Japan

Thank you for choosing Umi Umi UU-TG6 UW housing. Please read this instruction carefully before use for your understandings of a proper handling.

We assume no responsibility whatever for any damage on housing, camera or accessories resulting from user's negligence.

We assume no responsibility for incidental dameges arising out of product defects, such as shooting expenses, any relevant expenses or opportunity loss etc.

## **After Service**

The warranty card has been attached. Make sure everything is correctly stated such as the date of purchase or shop's name. Read warranty terms and conditions carefully and keep it in safe custody.

### Repair

The warranty covers repair service in accordance with warranty terms and conditions. To obtain warranty service, you may contact the nearest

\*Attention: At the request of customer we assume paid repair service when the product is repairable. You may obtain service at your dealer or the nearest authorized dealers.

Contact your dealer or the nearest authorized dealers when you have any questions about after service.

## **⚠ Precautions For Safe Handling**

### Please observe the following precautions.

- · Opening lock knob with a long nail or an artificial nail may cause a chipping or breaking nail.
- · Do not set up housing in a dusty or sandy environment.
- · Handle housing carefully to prevent any strong impacts by dropping or crashing.
- Do not leave or keep housing in a place being exposed to direct sunlight or high temperature like on the sand, on the deck of a boat or in the trank of a car, etc.
- After rinsing housing in fresh water to remove salts, dry with a towel, do not use any kinds of heating equipment.
- Do not use the petroleum solvents such as alcohol, benzin and thinner, or oil/chemicals allied products such as corrosion prevention, lubricant and glazing agents.
- · Do not leave or keep housing at any place in high humidity or extreme fluctuations in temperature.
- · Keep the housing out of children's reach.

**Accessories Included** 

this package.

Ring flash diffuser

3 Rubber cap of fiber optic

4 Fiber-optic cable socket part

2 Spare o-ring

**5** Screw (3 pcs)

6 O-ring remover Silicone grease

8 Hex wrench

# ⚠ Maintenance/ Storage

- · Rinse the housing thoroughly in fresh water after use and keep in a cool and dry place, away from direct sunlight.
- Do not keep housing in a place with extreme fluctuations in temperature, extreme cold, or high humidity.
- We recommend a complete overhaul of housing per year.

Please make sure all of the following items are included in


Parts for TG-5 (5 pieces)

(Before equip TG-5 camera, you

which image shown as beloow.)

must stick this parts on the screws

**Switches And Controls** 

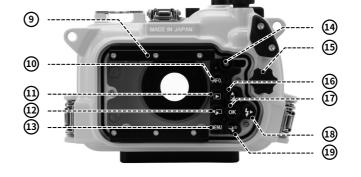

- ① ON/OFF button ② Zoom lever ③ Control dial
- ④ Shutter button
- ⑤ Right Lock knob 6 Upper Lock knob
- Tlash window
- 8 Left Lock knob

Material:

Weight:

Mount:

**Dimensions:** 

**Depth Rating:** 

- Mounting rail 10 INFO button
- Playback button

**Specifications** 

**Compatible Camera:** Olympus Tough TG-6/ TG-5

ABS resin

Approx 690g 60m (197ft)

AD mount

- ⊕ button
- <sup>®</sup> MENU/Wi-Fi button
- (14) Movie button
- (15) Mode dial
- (16) ▲/ Exposure compensation button
- ① OK button

(W) 162mm  $\times$  (H) 118mm  $\times$  (D) 98mm

(Ring flash diffuser included)

 
- ►/ Flash button
- Self-timer/ Earse button

## 5. Clean the flat part of the outside of the O-ring groove

 
4. Use a swab to clean the

placed.

groove where the O-ring is

 












A. Place The Camera

1. Remove the lens-ring from the

(For the removal method,

instruction manual)

**%If you omit this step, the** 

housing will not be closed.

2. Please open the three locks

from the back of the housing.

Start with the top lock and

then open the left and right

please refer to the camera's

camera body.

respectively.



(about 5mm).



silicone grease to your fingers



7. Install the O-ring into the housing.













- 9. Make sure the zoom lever is straight. Then, place the camera into the housing from above.
- **10.** After putting the camera inside, move the zoom lever of the housing to the right and left, and check if it is already linked with the camera's zoom lever.
- 11. Close the back cover and close the three locks in the opposite sequence. Please start with the left and right locks and finally close the top lock.
- 12. Finish.









## C. About The Ring Flash Diffuser

The effect of the ring flash is only valid when the camera is under "Microscope Mode".

Please set the mode dial in "Microscope Mode" before using.

With other shooting modes, vignetting may occur or the built-in flash may not work normally.

- 1. The ring flash diffuser of the housing is a bayonet type. Let the white side of the ring flash diffuser face the upper left side and attach it to the housing, and screw it to the right side.
- 2. It will be locked in this position.



3. When not using optic fiber, please use O-ring to close the position in the figure in order to prevent the built-in flash from spilling light.



## **Housing Accessories (Optional)**



UU-WIDE400PRO - Fisheye Wide Angle Conversion Lens UU-500501



UU-LCDMAX01 -LCD Screen Magnifier UU-500101



Umi Umi Macro Fisheye Set UU-300401

# **B.After-diving Maintenance**

1. Wash the seawater with clean water, and dry it with a towel.



2. Carefully unlock the housing. When opening the case, water droplets may accumulate in the vicinity of the O-ring's groove.

 


3. Wipe it with a paper towel or cotton swab.




4. Wipe the water droplets near the groove on the back cover.









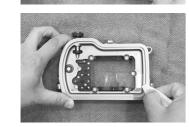

## D. Use External Strobe

1. Screw the provided 3 screws

2. As the picture shown on the right.



